



AC – 705CE Operating Instructions

Operation

- 1) Pour clean cold water through the water hole. Stop the water supply when the indicator reaches the red point
- 2) Or store ice cubes in the ice tank, the cool air will be colder and more comfortable than the water you supply
- 3) Plug the unit into the correct voltage
- 4) Touch on and speed switch, and go on touching for desired air speed 'H' for strong air, 'M' for fair air and 'L' for weak air
- 5) Touch the timer switch on, and adjust the fixed time. Once it is set, it can be operated automatically for 1, 2, 4, and 8 hours. If you do not set the timer, the unit will operate continuously
- 6) Touch the cool switch on, the air filter is operating and mist cool air is coming out about 3 minutes later. Touch the cool switch off, the air filter stops working, only dry and fresh air out
- 7) Touch the swing switch on, it can make a 120° sweep. Or touch swing switch off for choosing the desired air direction
- 8) Move the louvers for the air vent to change upper or lower air

Cautions

- Don't pour the water into the ice tank
- To prevent malfunctioning cause by breakage, do not place the unit directly against the wall
- Moving of the unit should be slow and with the unit positioned sideways. Be careful not to knock the unit over
- Do not put any objects on top of the unit
- Do not obstruct the ventilation of the unit
- Wash the air filter and water tank every two weeks
- Keep the unit away from heaters or other heat producing equipment

London Cool air conditioner rental and sales

This document has been compiled in good faith, but no representation is made or warranty given (either express or implied) as to the completeness or accuracy of this information